



**VENT-A-ROOF**  
**Retro-Fit Installation Guide**




# Retro-Fit Installation Guide

1. Remove existing ridge
2. Ping a line across the ridge in preparation to cut the sheets back
3. Cut back the sheets
4. Cut back any insulation or anticon to reveal throat gap
5. Start laying VAR louvres, left to right, following appropriate screw pattern
6. Ensure foam is imbedded at least 3mm into roof sheet. This creates a watertight seal
7. Apply silicon to each louvre join – also silicon pre-existing screw holes as you go
8. Snip hip sections to allow louvre to bend around corners
9. Install ridge as usual, molding the new ridge into the existing ridge



1. Remove existing ridge

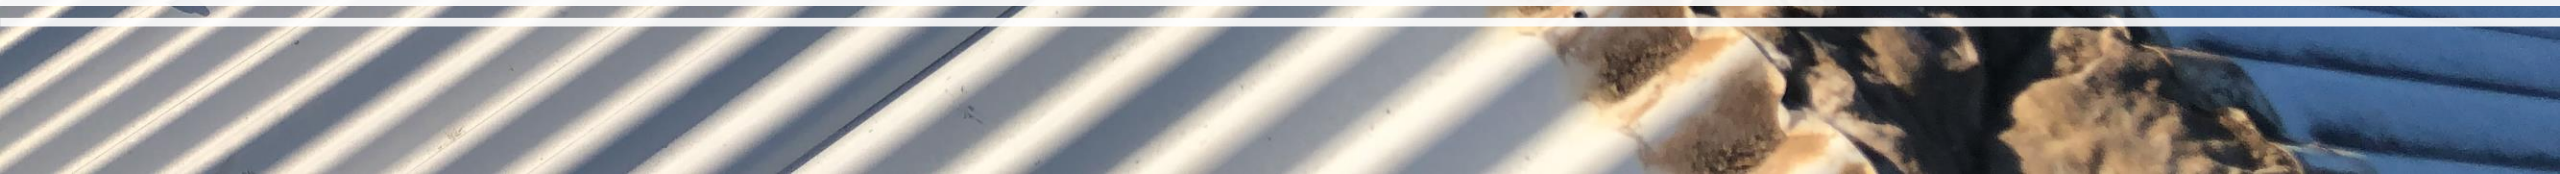



2. Ping a line across the ridge in preparation to cut the sheets back





3. Cut back the sheets





4. Cut back any insulation or anticon to reveal throat gap



5. Start laying VAR louvres, left to right, following appropriate screw pattern



6. Ensure foam is imbedded at least 3mm into roof sheet. This creates a watertight seal






7. Apply silicon to each louvre join – also silicon pre-existing screw holes as you go



8. Snip hip sections to allow louvre to bend around corners



9. Install ridge as usual, molding the new ridge into the existing ridge

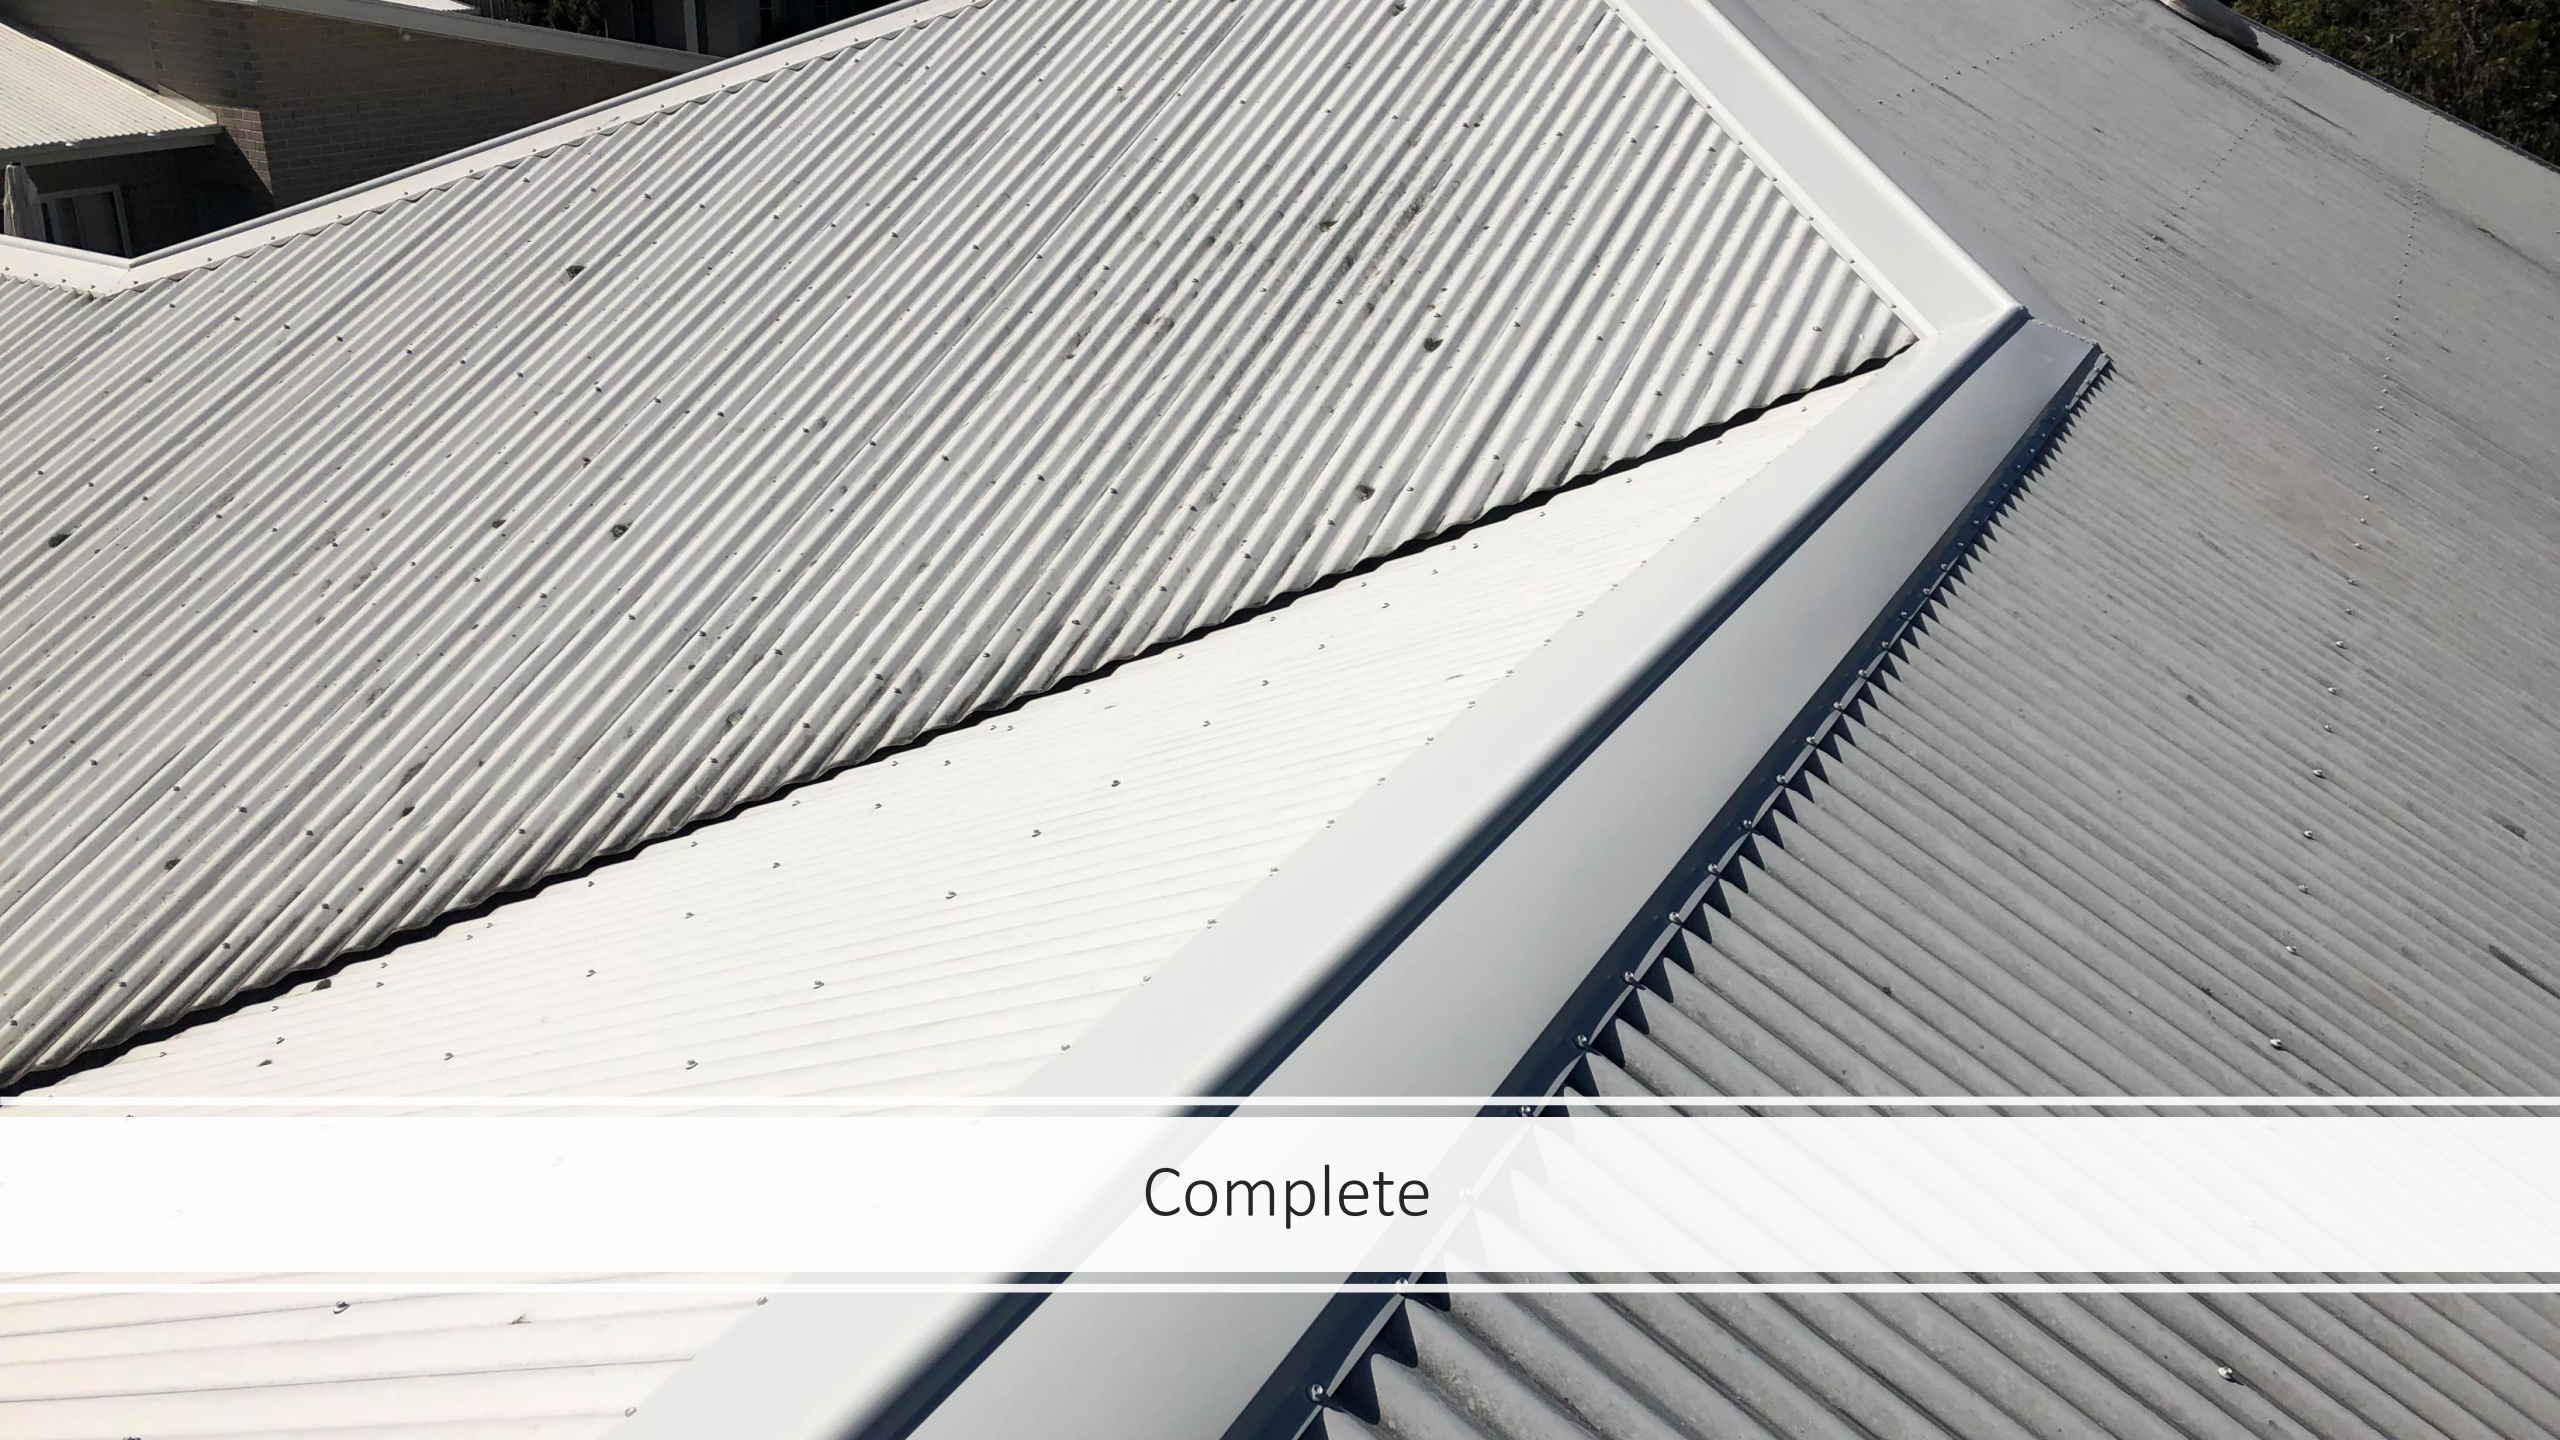

Complete